

Installation Instructions for Maytag PR system

1. **Turn off Power** Remove 4 tamper proof screws on face of Maytag PR Machine (Washer or Dryer)
2. Separate face plate from rear plate
3. Between the two plates you will need to remove the card slide plastic insert (lift tabs to release plastic)
4. To begin installation fasten the face plate to the rear plate using the two bottom screws(make sure display cover is aligned properly)
5. Insert black plastic keyport into aluminum mounting plate provided to you in PR kit.
6. Insert keyport with mounting plate into the face of the machine (Align keyport all the way to the left of the card slide opening).
7. Slide U shaped silver clip on between ridge of keyport and the rear of machine plate (Keyport should be very snug)
8. Align Aluminum mounting plate and mark with masking tape or pencil along outside of each corner around plate.
9. Remove silver U clip and unassembled keyport from mounting plate. Peel off adhesive backing and line up plate with markings from step 8.
10. Repeat steps 5,6 and 7.
11. Slide circuit board back onto keyport with LED (light) side up. (Be careful not to insert circuit board in upside down you will damage LED).
12. Slide copper clip on over the keyport through holes in circuit board. This will keep circuit board from sliding backwards during usage.
13. You will find a wire- harness within the maytag literature. Plug 8 pin (block) side of harness onto the Debitkey circuit board. Plug other end of harness onto connector marked AA3 on the maytag controller circuit board.
14. Reassemble maytag face plate. Your installation is now complete.
15. To begin your machine setup enter setup key into keyport. And refer back to your maytag setup Procedures found in machine literature.